



*OPENING QUALITY DOORS
AROUND THE WORLD*



JOB NAME:

JOB LOCATION:

COURION JOB #:

LIFT #:


www.couriondoors.com

CAR Enclosure Installation Instructions

CAR Enclosure Installation Instructions

Step
1

Mount the Wainscot Mounting Angle to the Floor of the Platform. **IMPORTANT - THE PLATFORM EDGE DIMENSION IS FOR REFERENCE ONLY AND MAY VARY DEPENDING UPON THE ACTUAL PLATFORM WIDTH. THE CLEAR INSIDE PLANNED DIMENSION MUST BE MAINTAINED FROM THE CENTER LINE OF THE PLATFORM.**

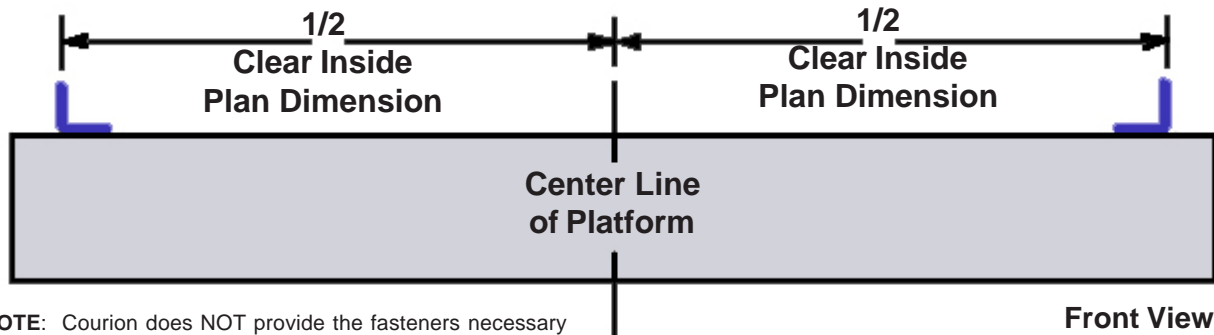


NOTE: Courion does NOT provide the fasteners necessary to mount the Wainscot Mounting Angle to the floor of the Platform. Please use the appropriate fasteners for the type and style of Platform in your hoistway.


IMPORTANT - PLEASE READ! Please refer to Courion's General Dimension drawings provided with these instructions for the PLANNED CENTER LINE of the Platform, the REQUIRED WAINSCOT SETBACK from the platform edge (on the Car Gate side), and CANOPY PANEL SETBACK from the wainscot edge (on the Car Gate side). These dimensions vary from job to job and are critical for the correct installation of your Courion equipment.

Step
2

Bolt the side Wainscot Panels to the Wainscot Mounting Angle using the fasteners provided by Courion. Alternate side Wainscot Panels with Canopy Panels working toward the rear of the Car.

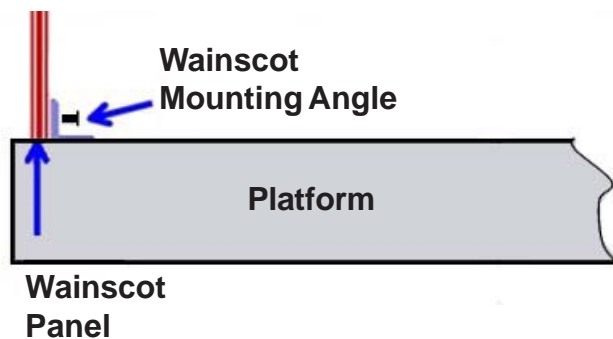

Front View

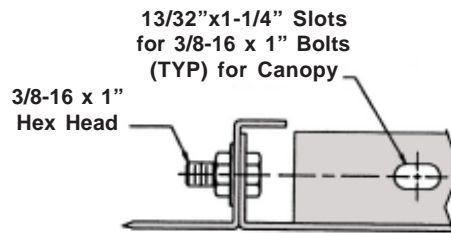

Top View



CAR Enclosure Installation Instructions



Step 3

Mount the Stabilizer Angles to the Car Enclosure using the fasteners provided by Courion. Holes must be drilled in the Canopy and Stiles.

Step 4


Mount the Light Fixtures and Light Fixture Covers in the cutouts provided using the fasteners provided by Courion. Mount the Emergency Exit Contact to the Canopy.

5/16-18 x 1"
Hex Head Cap
Screw
(Self-Tapping)

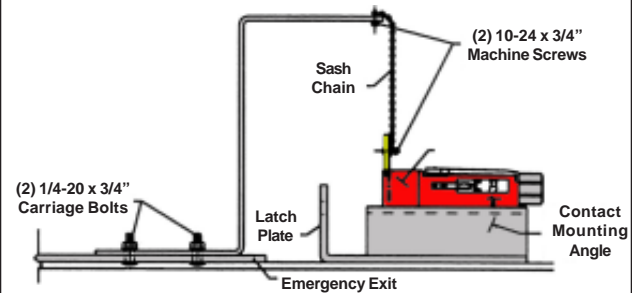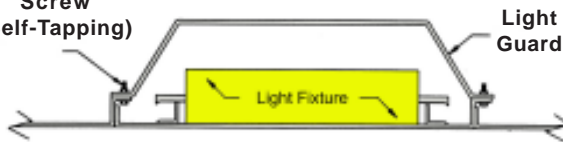

Step 5

When Applicable, mount the Car Top Handrail to the Car Enclosure Canopy Top.

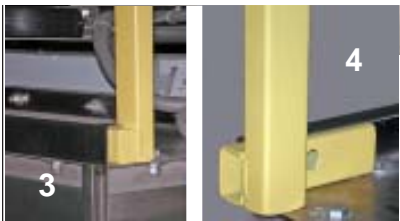

#1 Hand Rail Posts are handed - use the correct hand on each side of the top of the Car Enclosure.


#2 Remove the outermost canopy bolt from the canopy panels at the location where you want to attach your Hand Rail Supports. Hand Rail Posts should be mounted every 5' to 6'.

#3 & #4 Slide the Hand Rail Post into the Canopy Panel's flange and secure the Hand Rail Post with the fasteners found in the Hand Rail Hardware Kit.

NOTE: You will have to drill a 7/16" hole in the Canopy Flange for the Hand Rail Posts to be mounted across the back of the Car Enclosure.

#5 Attach the Hand Rail to the Hand Rail Posts using the fasteners found in the Hand Rail Hardware Kit. Cut the Hand Rail to the appropriate length.



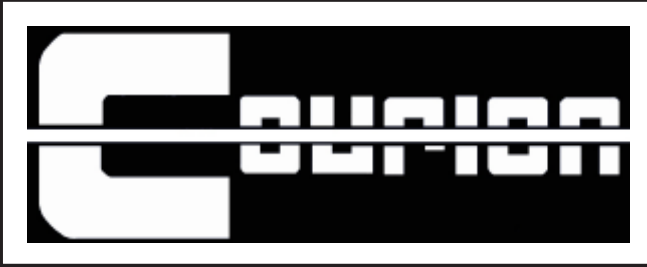

**3044 Lambdin Avenue
St. Louis, Mo 63115
(800) 533-5760 or (314) 533-5700
(314) 533-5720 (fax)
sales@couriondoors.com**